



QR of Manual

[www.adfweb.com/download/
filefold/MN67010_ENG.pdf](http://www.adfweb.com/download/filefold/MN67010_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67010_ENG.pdf](http://www.adfweb.com/download/filefold/BS67010_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67010.zip](http://www.adfweb.com/download/filefold/SW67010.zip)

HD67010

BOX SHEET

Gateway ModBUS RTU / ModBUS TCP

Box Sheet for order code: HD67010
Document code: BS67010
V1.003





ADFweb.com srl
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


www.ADFweb.com

CONNECTION SCHEME

Order code: HD67010

Jumper3: Boot mode

-  = Yes Jumper
Boot Mode
-  = No Jumper
Normal Mode

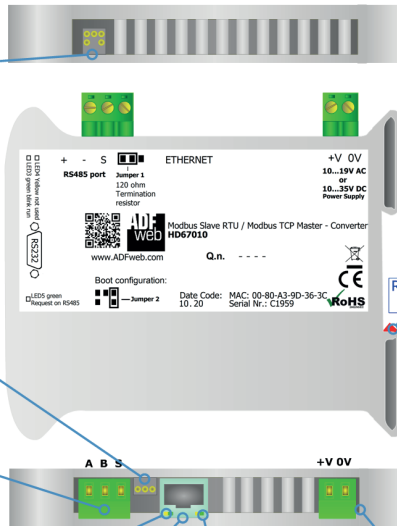

Jumper2: Termination Modbus Line

-  = Open
-  = 220 ohm

Connector3: Modbus on RS485

S = Shield
B = Negative wire
A = Positive wire

Led2:
Gree:Half-duplex
Yellow:Full-duplex

Connector2:
Ethernet Port
(RJ11 Plug)

Led1:
Green: 10Mbps
Yellow:100Mbps

Connector1:
Power Supply
0V = Ground
+V = Positive wire
12/18 VAC – 4 VA
12/24 VDC – 4 Watt

Led4:
Green
RUN

Led3:
Yellow
Not used

Port RS232 (D-SUB9-Male)

 
PIN2 = TX
PIN3 = RX
PIN5 = GND

Used for:

- A) Programmation Port
- B) Modbus on RS232

To connect the device to the COM port of a PC in order to set it. You have to use the programming cable AC34107.

Or a cable made as showed here:



Led5:
Green
Request on RS-485

Order code: HD67010