


CANopen – Repeater – Extender bus line

CONNECTION SCHEME:

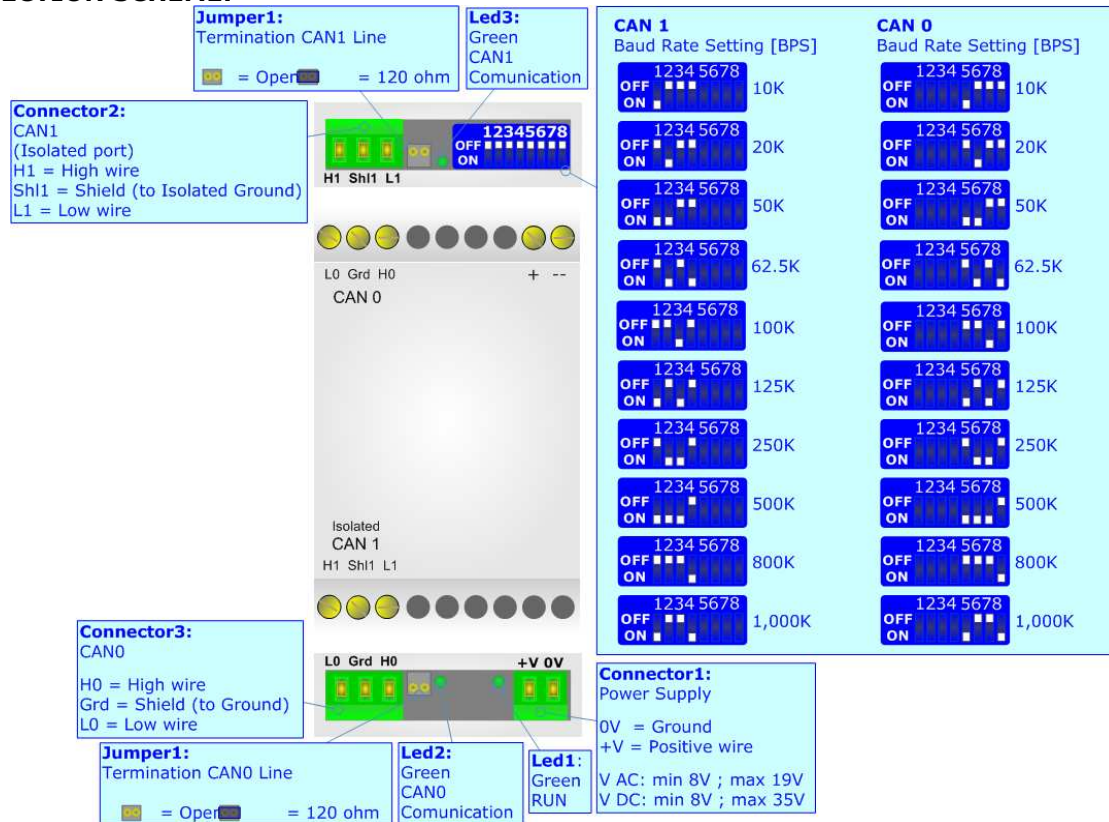

SET BAUD RATE:

The switches for setting the CAN0 baud Rate and CAN1 on the front panel of the device.

Dip n° 1, 2, 3, 4 CAN1 setting

Dip n° 5, 6, 7, 8 CAN0 setting

| Speed CAN1 BPS | Dip 1 | Dip 2 | Dip 3 | Dip 4 |
|----------------|-------|-------|-------|-------|
| Speed CAN0 BPS | Dip 5 | Dip 6 | Dip 7 | Dip 8 |
| 10K | ON | OFF | OFF | OFF |
| 20K | OFF | ON | OFF | OFF |
| 50K | ON | ON | OFF | OFF |
| 62.5K | OFF | ON | OFF | ON |
| 100K | OFF | OFF | ON | OFF |
| 125K | ON | OFF | ON | OFF |
| 250K | OFF | ON | ON | OFF |
| 500K | ON | ON | ON | OFF |
| 800K | OFF | OFF | OFF | ON |
| 1000K | ON | OFF | OFF | ON |

To obtain the complete manual go to :

www.adfweb.com/download/filefold/CAN_BUS_Repeater_MN67117_ENG.pdf

To obtain the new version of this box sheet pleas go to:

www.adfweb.com/download/filefold/BS67117M_ENG.pdf

ADFweb.com s.r.l.
 www.adfweb.com
 info@adfweb.com
 support@adfweb.com