

# CanOpen to CanOpen

To obtain the complete manual please go to

[www.adfweb.com/download](http://www.adfweb.com/download)


or

[www.adfweb.com/download/filefold/CANopen\\_CANopen\\_MN67121\\_ENG.pdf](http://www.adfweb.com/download/filefold/CANopen_CANopen_MN67121_ENG.pdf)

To obtain the new version of this box sheet please go to

[http://www.adfweb.com/download/filefold/BS67121\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67121_ENG.pdf)

## CONNECTION SCHEME

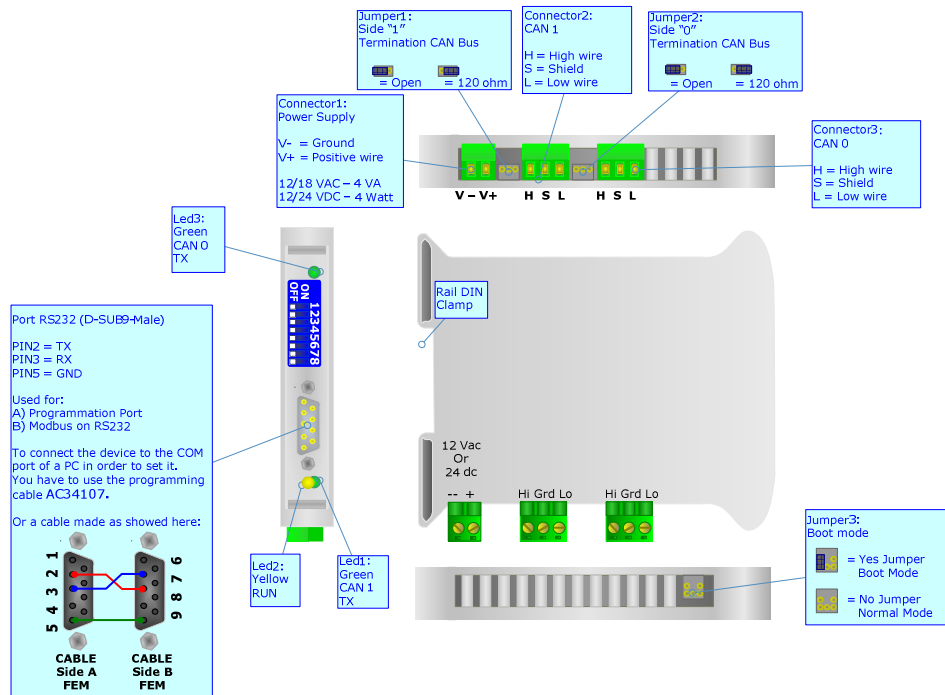

## THE CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67121. To obtain this software please go to

<http://www.adfweb.com/download>


or

<http://www.adfweb.com/download/filefold/SW67121.zip>

## CHARACTERISTICS OF THE CABLES:

The connection from RS232 socket to a serial port must be made with a NULL MODEM cable (a serial cable where the pins 2 and 3 are crossed).

It is recommended that the RS232C Cable not exceed 15 meters.

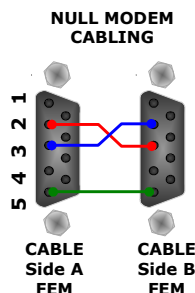

ADFweb.com s.r.l.  
 www.adfweb.com  
 info@adfweb.com  
 support@adfweb.com