



QR of Manual

[www.adfweb.com/download/
filefold/MN67164_ENG.pdf](http://www.adfweb.com/download/filefold/MN67164_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67164-232-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67164-232-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67164.zip](http://www.adfweb.com/download/filefold/SW67164.zip)

HD67164-232-B2

BOX SHEET

Modbus Master / SNMP - Converter

Box Sheet for Order code: HD67164-232-B2
Document code: BS67164-232-B2
V1.002



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME



Order code: HD67164-232-B2

Connector 4:
Port RS232 (D-SUB9-Male)
(Isolated Port)

PIN2 = RX
PIN3 = TX
PIN5 = GND* (to Isolated Ground)

Used for:
- Programmation Port
- Modbus on RS232

To connect the device to the COM port of a PC in order to set it you have to use the programming cable AC34107 or a cable made as showed here:

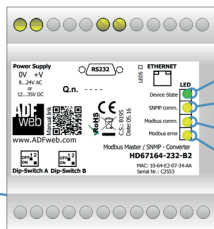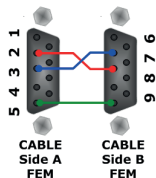


Led1:
Green
Device state

Led2:
Yellow
SNMP comm.

Led4:
Yellow
Modbus comm.

Led5:
Yellow
Modbus error

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

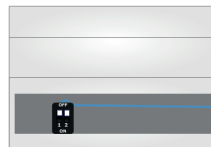

Dip-Switch A:
-Dip1 – Must be at ON
-Dip2 – Functioning Mode

= Normal = Boot

Led3:
Green
Ethernet Link

Connector5:
Ethernet Port
(RJ45 Plug)



Order code: HD67164-232-B2