

EXTERNAL LINKS

HD67164-485-B2



QR of Manual

[www.adfweb.com/download/
filefold/MN67164_ENG.pdf](http://www.adfweb.com/download/filefold/MN67164_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67164-485-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67164-485-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67164.zip](http://www.adfweb.com/download/filefold/SW67164.zip)

HD67164-485-B2

BOX SHEET

Modbus Master / SNMP - Converter

Box Sheet for Order code: HD67164-485-B2

Document code: BS67164-485-B2

V1.003




ADFweb.com srl

Strada Nuova, 17, IT-31010 Marenco di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67164-485-B2

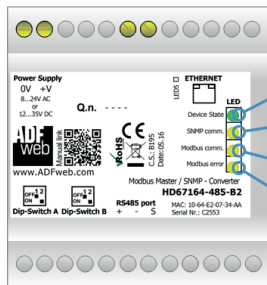


Led1:
Green
Device state

Led2:
Yellow
SNMP comm.

Led4:
Yellow
Modbus comm.

Led5:
Yellow
Modbus error

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

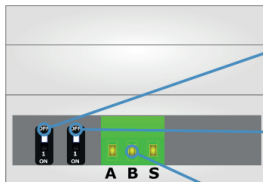

Dip-Switch A:
-Dip1 - Functioning Mode
 = Normal = Boot

Dip-Switch B:
-Dip1 - RS485 Termination Resistor
 = Open = 120 Ohm

Connector3:
RS485 (Isolated port)
S = Shield* (to Isolated Ground)
B = Negative wire
A = Positive wire



Connector5:
Ethernet Port
(RJ45 Plug)

Led3:
Green
Ethernet Link