

Modbus Slave / SNMP - Converter

To obtain the complete manual please go to:

www.adfweb.com/download/filefold/MN67165_ENG.pdf



To obtain the new version of this box sheet please go to:

www.adfweb.com/download/filefold/BS67165-232-A1_ENG.pdf

CONNECTION SCHEME:

Dip-Switch A:

- Dip1 - Must be at ON
- Dip2 - Functioning Mode

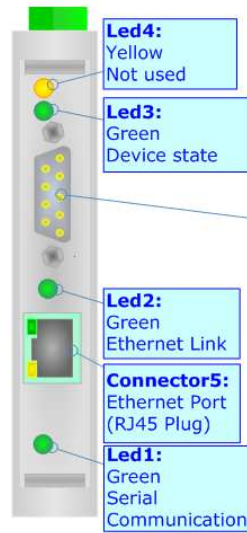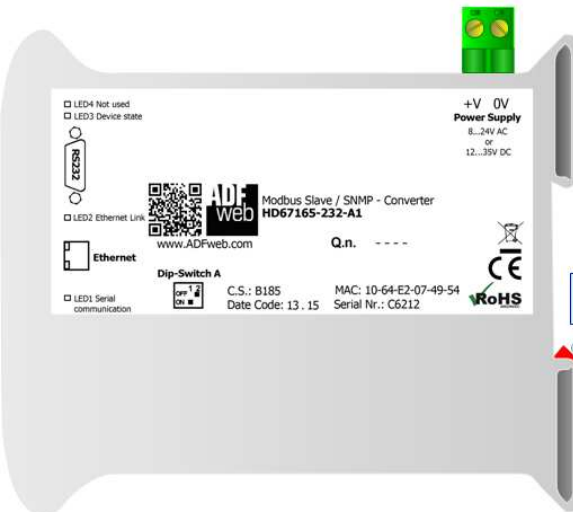

Connector 4:
Port RS232 (D-SUB9-Male)
(Isolated Port)

PIN2 = RX
PIN3 = TX
PIN5 = GND* (to Isolated Ground)

Used for:
- Programming Port
- Modbus on RS232

To connect the device to the COM port of a PC in order to set it you have to use the programming cable AC34107 or a cable made as showed here:

Connector1:
Power Supply port

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67165. To obtain this software please go to:

www.adfweb.com/download/filefold/SW67165.zip

ADFweb.com s.r.l.
www.adfweb.com
support@adfweb.com

Manual



Box-Sheet



Software

