

EXTERNAL LINKS

HD67166-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67166_ENG.pdf](http://www.adfweb.com/download/filefold/MN67166_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67166-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67166-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67166.zip](http://www.adfweb.com/download/filefold/SW67166.zip)

HD67166-A1

BOX SHEET

**Modbus TCP Master / SNMP Agent
Converter**

Box Sheet for Order code: HD67166-A1
Document code: BS67166-A1
V1.002



ADFweb.com srl



Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67166-A1

Dip-Switch A:
-Dip1 – Must be at ON
-Dip2 – Functioning Mode

 = Normal  = Boot



Led1:
Green
ON

Led2:
Yellow
Not used

Led3:
Red
Device state

Led4:
Red
Not used

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67166-A1