


## CAN – Repeater – Extender bus line

### CONNECTION SCHEME:

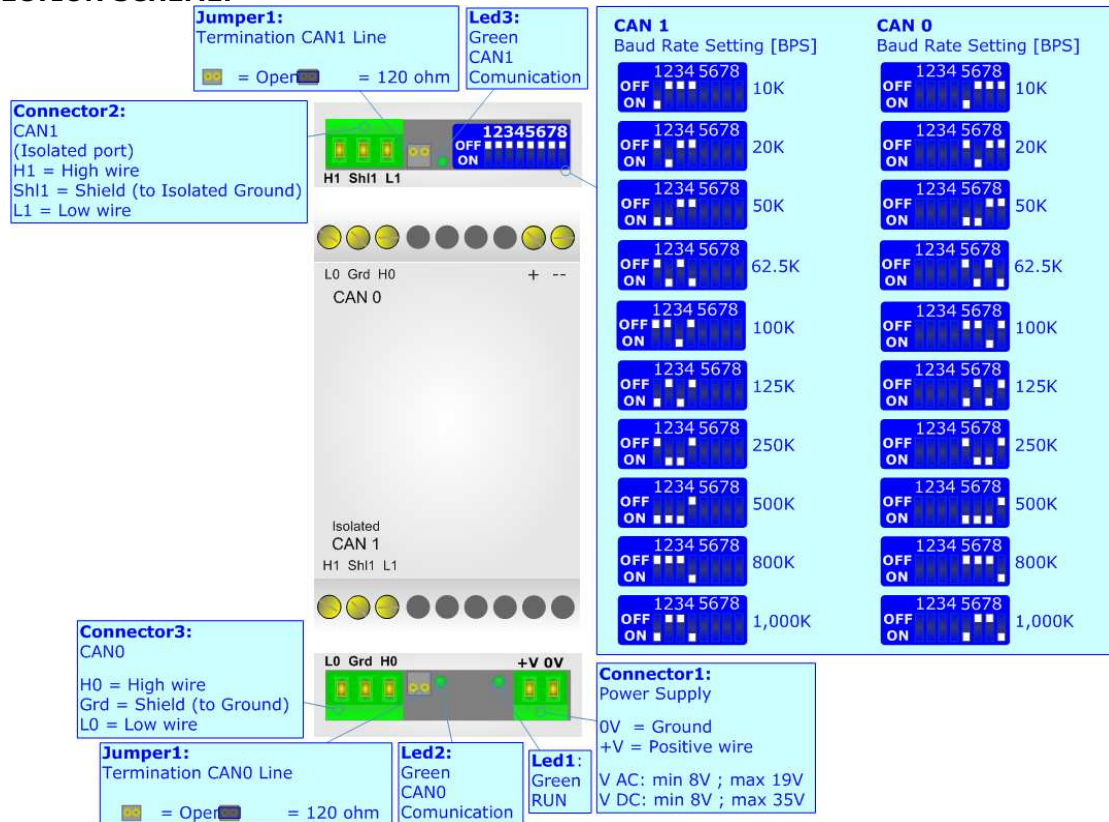

### SET BAUD RATE:

The switches for setting the CAN0 baud Rate and CAN1 on the front panel of the device.

Dip n° 1, 2, 3, 4 CAN1 setting

Dip n° 5, 6, 7, 8 CAN0 setting

Speed CAN1 BPS	Dip 1	Dip 2	Dip 3	Dip 4
Speed CAN0 BPS	Dip 5	Dip 6	Dip 7	Dip 8
<b>10K</b>	ON	OFF	OFF	OFF
<b>20K</b>	OFF	ON	OFF	OFF
<b>50K</b>	ON	ON	OFF	OFF
<b>62.5K</b>	OFF	ON	OFF	ON
<b>100K</b>	OFF	OFF	ON	OFF
<b>125K</b>	ON	OFF	ON	OFF
<b>250K</b>	OFF	ON	ON	OFF
<b>500K</b>	ON	ON	ON	OFF
<b>800K</b>	OFF	OFF	OFF	ON
<b>1000K</b>	ON	OFF	OFF	ON

To obtain the complete manual go to :

[www.adfweb.com/download/filefold/CAN\\_BUS\\_Repeater\\_MN67181\\_ENG.pdf](http://www.adfweb.com/download/filefold/CAN_BUS_Repeater_MN67181_ENG.pdf)

To obtain the new version of this box sheet pleas go to:

[www.adfweb.com/download/filefold/BS67181M\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67181M_ENG.pdf)

ADFweb.com s.r.l.  
 www.adfweb.com  
 info@adfweb.com  
 support@adfweb.com