

J1939 / Modbus TCP slave – Converter

To obtain the complete manual please go to:



www.adfweb.com/download/filefold/MN67215_ENG.pdf

To obtain the new version of this box sheet please go to:

www.adfweb.com/download/filefold/BS67215-A1_ENG.pdf

CONNECTION SCHEME:

Dip-Switch A:
 -Dip1 – Must be at ON
 -Dip2 – Functioning mode
 = Normal = Boot

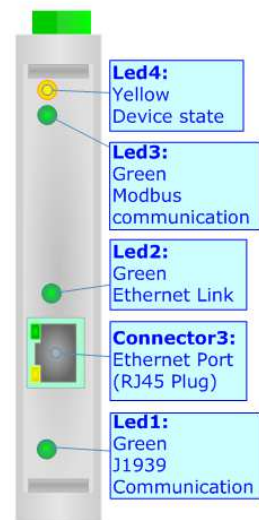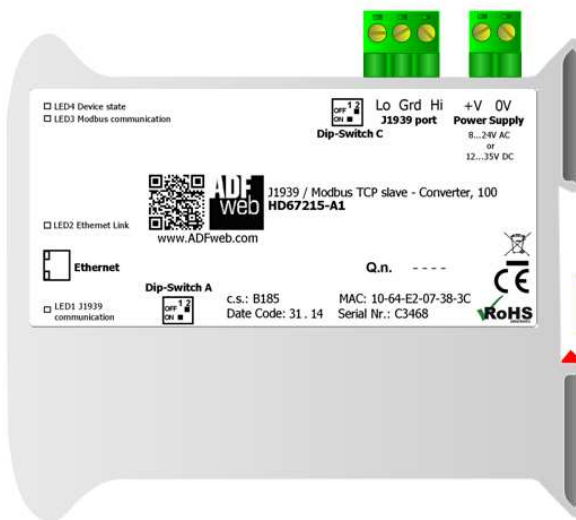

Dip-Switch C:
 -Dip1 – J1939 Termination Resistor
 -Dip2 – Not used
 = Open = 120 Ohm

Connector2:
 J1939 port (Isolated port)
 Hi = High wire
 Shl = Shield* (to Isolated Ground)
 Lo = Low wire

Connector1:
 Power Supply port
 0V = Ground
 +V = Positive wire
 V AC: min 8V ; max 24V
 V DC: min 12V ; max 35V

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67215, updated at least to the version 3.000. To obtain this software please go to:

www.adfweb.com/download/filefold/SW67215.zip

ADFweb.com s.r.l.
 www.adfweb.com
 support@adfweb.com

Manual



Box-Sheet



Software

