

EXTERNAL LINKS

HD674-A003-E4X-xxx



QR of Manual

[www.adfweb.com/download/
filefold/MN674-A003_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A003_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS674-A003-E4X_
ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A003-E4X_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW674-A003.zip](http://www.adfweb.com/download/filefold/SW674-A003.zip)

HD674-A003-E4X-xxx

BOX SHEET

**Modbus TCP Slave / Modbus Master
Converter**

Box Sheet for Order code: HD674-A003-E4x-xxx
Document code: BS674-A003-E4x
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD674-A003-E4X-xxx

Connector3:

RS485 port

+ = Positive wire
- = Negative wire
Shl = Shield (to Isolated Ground)



Connector2:



Ethernet Port
(RJ45 Plug)

Connector1:

Power Supply port

0V = Ground
+V = Positive wire

V AC: min 8V ; max 26V
V DC: min 10V ; max 40V

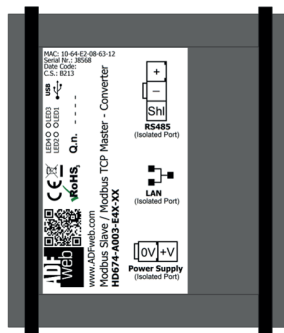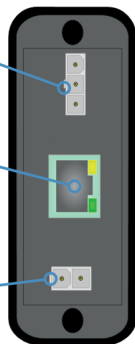

Connector4:
USB port

Led 1:
Green
Device State

Led 2:
Green
Serial comm.

Led 3:
Yellow
USB link

Led 4:
Green
Ethernet comm.



Order code: HD674-A003-E4X-xxx