

EXTERNAL LINKS

HD674-A008-2-E4X-xxx



QR of Manual

[www.adfweb.com/download/
filefold/MN674-A008_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A008_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS674-A008-2-E4X_
ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A008-2-E4X_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW674-A008.zip](http://www.adfweb.com/download/filefold/SW674-A008.zip)

BOX SHEET

Modbus Master / SNMP Agent
Converter

Box Sheet for Order code: HD674-A008-2-E4x-xxx
Document code: BS674-A008-2-E4x
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD674-A008-2-E4X-xxx

www.ADFweb.com

CONNECTION SCHEME

Order code: HD674-A008-2-E4X-xxx

Connector3:

RS485 port



+ = Positive wire

- = Negative wire

Shl = Shield (to Isolated Ground)

Connector2:

Ethernet Port
(RJ45 Plug)

Connector1:

Power Supply port




0V = Ground

+V = Positive wire

V AC: min 8V ; max 26V

V DC: min 10V ; max 40V

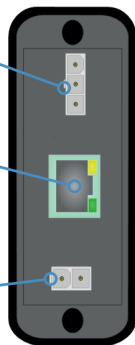

Connector4:
USB port

Led 1:

Green
Device State

Led 2:


Green
RS485 comm.

Led 3:

Yellow
USB link

Led 4:

Green
Ethernet comm.

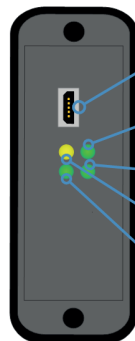

Order code: HD674-A008-2-E4X-xxx