

EXTERNAL LINKS

HD674-A038-E4x-xxx



QR of Manual

[www.adfweb.com/download/
filefold/MN674-A038-E4x_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A038-E4x_ENG.pdf)

BOX SHEET

CAN / MQTT – Converter



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS674-A038-E4x_ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A038-E4x_ENG.pdf)

Box Sheet for Order code: HD674-A038-E4x-xxx
Document code: BS674-A038-E4x-xxx
V1.000



QR of Software

[www.adfweb.com/download/
filefold/SW674-A038.zip](http://www.adfweb.com/download/filefold/SW674-A038.zip)



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD674-A038-E4x-xxx

www.ADFweb.com

CONNECTION SCHEME

Order code: HD674-A038-E4x-xxx

Connector3: CAN port



Hi = High wire
Lo = Low wire
Sh11 = Shield (to Isolated Ground)


Connector2: Ethernet Port (RJ45 Plug)

Connector1: Power Supply port

0V = Ground
+V = Positive wire



V AC: min 8V ; max 26V
V DC: min 10V ; max 40V

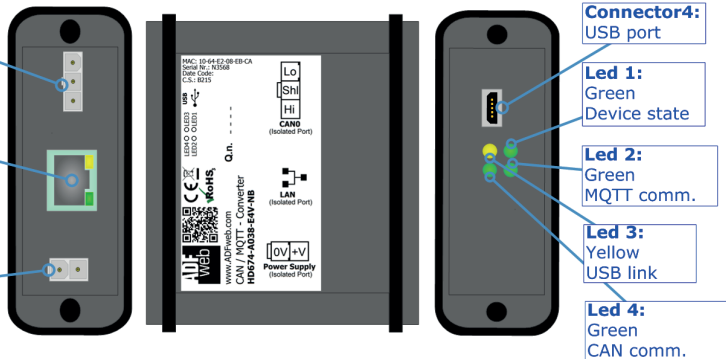

Order code: Order code: HD674-A038-E4x-xxx