

EXTERNAL LINKS

HD674-A044-E4x-xxx



QR of Manual

[www.adfweb.com/download/
filefold/MN674-A044-E4x_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A044-E4x_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS674-A044-E4x_ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A044-E4x_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW674-A044.zip](http://www.adfweb.com/download/filefold/SW674-A044.zip)

BOX SHEET

J1939 / MQTT – Converter

Box Sheet for Order code: HD674-A044-E4x-xxx
Document code: BS674-A044-E4x-xxx
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD674-A044-E4x-xxx

www.ADFweb.com

CONNECTION SCHEME

Order code: HD674-A044-E4x-xxx

Connector3:

CAN port

Hi = High wire

Lo = Low wire

Sh1 = Shield (to Isolated Ground)



Connector2:

Ethernet Port
(RJ45 Plug)

Connector1:



Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 26V

V DC: min 10V ; max 40V

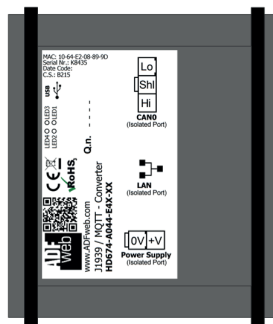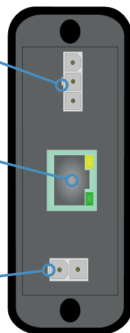

Connector4:

USB port

Led 1:

Green
Device state

Led 2:

Green
MQTT comm.

Led 3:

Yellow
USB link

Led 4:

Green
J1939 comm.



Order code: Order code: HD674-A044-E4x-xxx