

## PROFIBUS Slave to Serial Communication Slave


To obtain the complete manual please go to

[www.adfweb.com/download/filefold/Profibus\\_Slave\\_serial\\_communication\\_Slave\\_MN67562\\_ENG.pdf](http://www.adfweb.com/download/filefold/Profibus_Slave_serial_communication_Slave_MN67562_ENG.pdf)

To obtain the new version of this box sheet please go to

[www.adfweb.com/download/filefold/BS67562\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67562_ENG.pdf)

### CONNECTION SCHEME

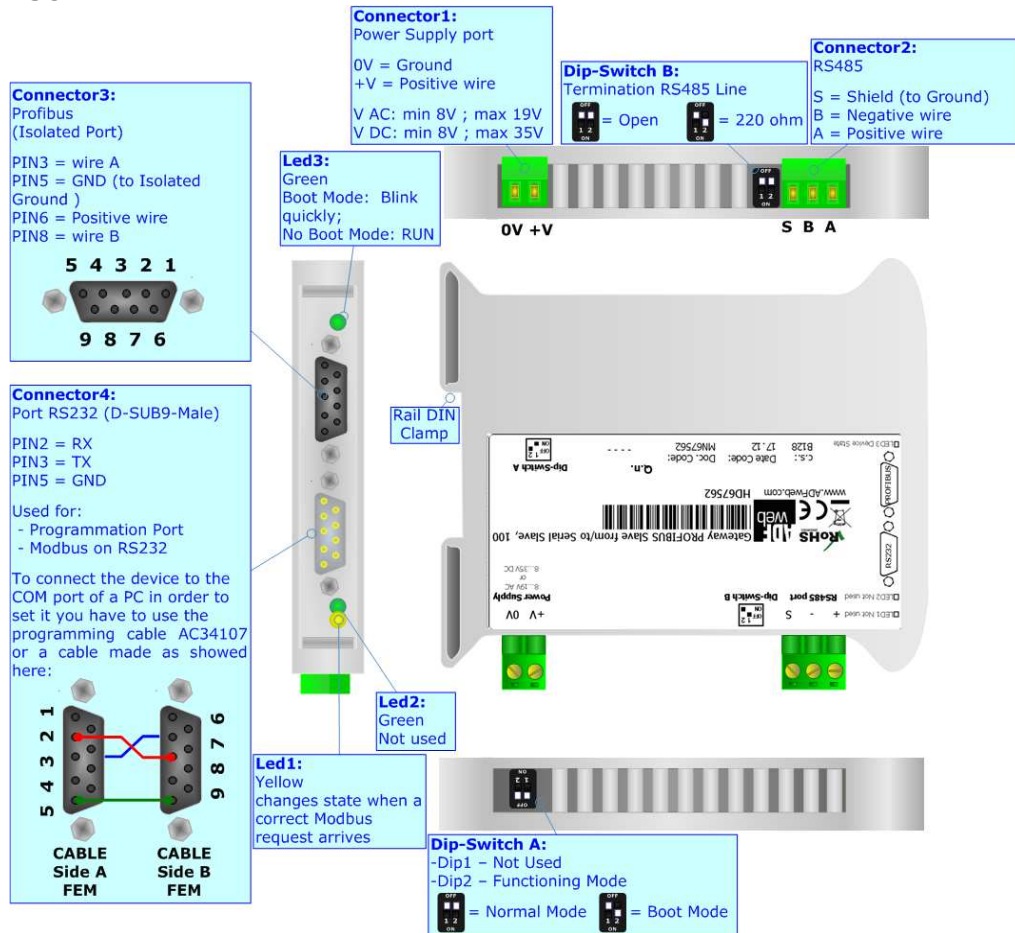

### THE CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67562. To obtain software please go to

[www.adfweb.com/download/filefold/SW67562.zip](http://www.adfweb.com/download/filefold/SW67562.zip)

### CHARACTERISTICS OF THE CABLES:

The connection from RS232 socket to a serial port must be made with a NULL MODEM cable (a serial cable where the pins 2 and 3 are crossed).

It is recommended that the RS232C Cable not exceed 15 meters.

