



QR of Manual

[www.adfweb.com/download/
filefold/MN67598_ENG.pdf](http://www.adfweb.com/download/filefold/MN67598_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67598-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67598-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67598.zip](http://www.adfweb.com/download/filefold/SW67598.zip)

HD67598-A1

BOX SHEET

Ethernet/IP / DeviceNet Slave - Converter

Box Sheet for Order code: HD67598-A1
Document code: BS67598-A1
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


www.ADFweb.com

CONNECTION SCHEME

Order code: HD67598-A1

Dip-Switch A:

-Dip1 – Functioning Mode

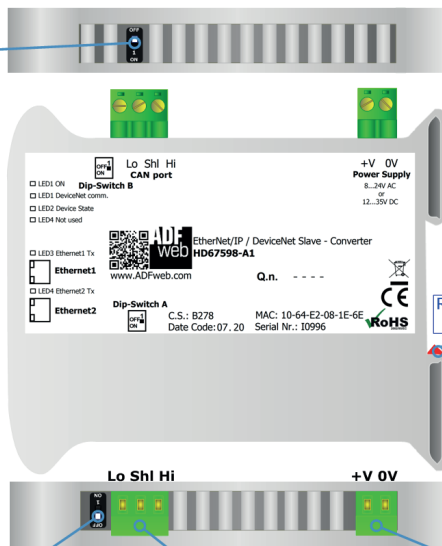

Led1:

Green
ON

Led2:

Green
DeviceNet comm.

Led3:

Green
Device state

Led4:

Green
Not used

Led5:

Green
Ethernet1 Link

Connector3:

Ethernet1 Port
(RJ45 Plug)

Led6:

Green
Ethernet2 Link

Connector4:

Ethernet2 Port
(RJ45 Plug)

Rail DIN
Clamp

Dip-Switch B:

-Dip1 – CAN Termination Resistor



Connector2:

CANopen port (Isolated port)

Hi = High wire
Shl = Shield* (to Isolated Ground)
Lo = Low wire

Connector1:

Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67598-A1