



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67602\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67602_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67602-232-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67602-232-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67602.zip](http://www.adfweb.com/download/filefold/SW67602.zip)

**HD67602-232-A1**

# BOX SHEET

## PROFINET / Modbus Master - Converter

Box Sheet for Order code: HD67602-232-A1  
Document code: BS67602-232-A1  
V1.003



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67602-232-A1

## Dip-Switch A:


-Dip1 – Functioning Mode



= Normal



= Boot

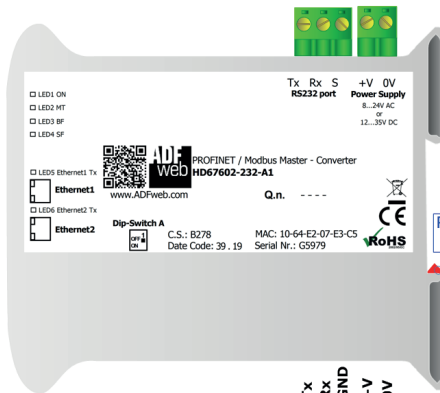

- LED1 ON
- LED2 MT
- LED3 BF
- LED4 SF

- LED5 Ethernet1 Tx
- LED6 Ethernet2 Tx



PROFINET / Modbus Master - Converter  
HD67602-232-A1

Dip-Switch A

C.S.: B278  
Date Code: 39 . 19

MAC: 10-64-E2-07-E3-CS  
Serial Nr.: G5979

Tx Rx S +V 0V  
RS232 port Power Supply  
8...24V AC  
0  
12...35V DC

Tx Rx GND +V 0V

## Connector2:

RS232 (Isolated port)

GND = Ground\* (to Isolated Ground)

Rx = Rx line

Tx = Tx line

## Led1:

Green ON

## Led2:

Yellow MT

## Led3:

Red BF

## Led4:

Red SF

## Connector3:

Ethernet1 Port (RJ45 Plug)

## Led6:

Green Ethernet2 Tx

## Connector4:

Ethernet2 Port (RJ45 Plug)

## Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67602-232-A1