



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67627\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67627_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67627-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67627-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67627.zip](http://www.adfweb.com/download/filefold/SW67627.zip)

**HD67627-A1**

# BOX SHEET

**S7comm / EtherNet/IP Slave  
Converter**

Box Sheet for Order code: HD67627-A1  
Document code: BS67627-A1  
V1.000




**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67627-A1

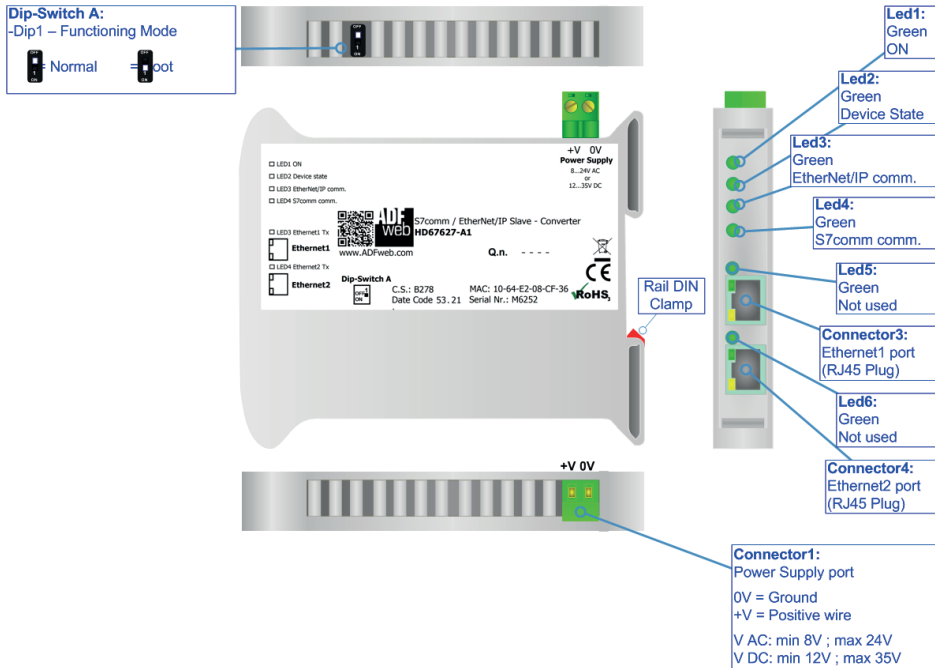

Order code: HD67627-A1