



QR of Manual

[www.adfweb.com/download/
filefold/MN67668_ENG.pdf](http://www.adfweb.com/download/filefold/MN67668_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67668-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67668-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67668.zip](http://www.adfweb.com/download/filefold/SW67668.zip)

HD67668-A1

BOX SHEET

**EtherNet/IP Master / Ethernet
Converter**

Box Sheet for Order code: HD67668-A1
Document code: BS67668-A1
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67668-A1

Dip-Switch A:

-Dip1 – Functioning Mode

 = Normal  = Boot



Rail DIN
Clamp

Led1:
Green
ON

Led2:
Green
Device State

Led3:
Green
Not used

Led4:
Green
Not used

Led5:
Green
Not used

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Not used

Connector4:
Ethernet2 port
(RJ45 Plug)

Connector1:
Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67668-A1