

EXTERNAL LINKS

HD67734-5-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67734_ENG.pdf](http://www.adfweb.com/download/filefold/MN67734_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67734-5-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67734-5-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67734.zip](http://www.adfweb.com/download/filefold/SW67734.zip)

HD67734-5-A1

BOX SHEET

**IEC 61850 Server/ Modbus Slave
Converter**

Box Sheet for Order code: HD67734-5-A1
Document code: BS67734-5-A1
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


www.ADFweb.com

CONNECTION SCHEME

Order code: HD67734-5-A1

Dip-Switch A: -Dip1 – Functioning Mode

 = Normal  = Boot

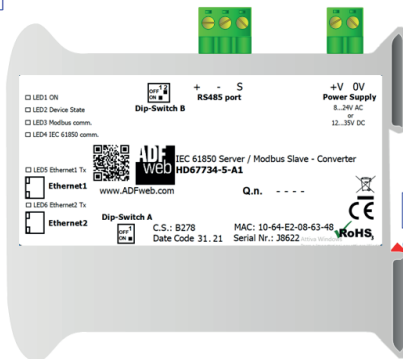

Rail DIN
Clamp

Led1:
Green
ON

Led2:
Green
Device state

Led3:
Green
Modbus comm.

Led4:
Green
IEC 61850 comm.

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Dip-Switch B:

-Dip1 – RS485 Termination Resistor

 = Open  = 20 Ohm

-Dip2 – Not used

Connector2:

RS485 (Isolated port)
S = Shield* (to Isolated Ground)
B = Negative wire
A = Positive wire

Connector1:

Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67734-5-A1