

## EXTERNAL LINKS

HD67752-A1



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67752\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67752_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67752-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67752-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67752.zip](http://www.adfweb.com/download/filefold/SW67752.zip)

**HD67752-A1**

# BOX SHEET

**IEC 61850 Server/ PROFINET Slave  
Converter**

Box Sheet for Order code: HD67752-A1  
Document code: BS67752-A1  
V1.000



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67752-A1

**Dip-Switch A:**  
-Dip1 - Functioning Mode

 = Normal     = Boot



**Led1:**  
Green  
ON

**Led2:**  
Yellow  
MT

**Led3:**  
Red  
BF

**Led4:**  
Red  
SF

**Connector3:**  
Ethernet1 Port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 Port  
(RJ45 Plug)

**Connector1:**  
Power Supply port

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67752-A1