

## EXTERNAL LINKS

HD67767-MSTP-A1



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67767\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67767_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67767-MSTP-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67767-MSTP-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67767.zip](http://www.adfweb.com/download/filefold/SW67767.zip)

**HD67767-MSTP-A1**

# BOX SHEET

**IEC 61850 Client / BACnet MSTP slave  
Converter**

Box Sheet for order code: HD67767-MSTP-A1  
Document code: HD67767-MSTP-A1  
V1.000



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67767-MSTP-A1

**Dip-Switch A:**  
-Dip1 – Functioning Mode

 Normal     Boot

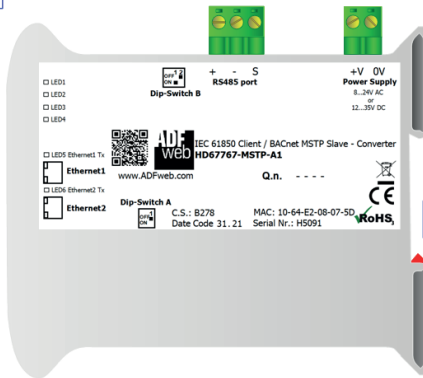

Rail DIN Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Device state

**Led3:**  
Green  
BACnet comm.

**Led4:**  
Green  
IEC 61850 comm.

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

**Dip-Switch B:**  
-Dip1 – RS485 Termination Resistor

 = Open     20 Ohm

-Dip2 – Not used

**Connector2:**  
RS485 (Isolated port)

S = Shield\* (to Isolated Ground)  
B = Negative wire  
A = Positive wire

**Connector1:**  
Power Supply port

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67767-MSTP-A1