



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67768\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67768_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67768-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67768-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67768.zip](http://www.adfweb.com/download/filefold/SW67768.zip)

**HD67768-A1**

# BOX SHEET

## IEC 61850 Client/ CAN - Converter

Box Sheet for Order code: HD67768-A1  
Document code: BS67768-A1  
V1.000



**ADFweb.com srl**


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67768-A1

**Dip-Switch A:**  
-Dip1 – Functioning Mode  
☐ = Normal    ☐ = Boot

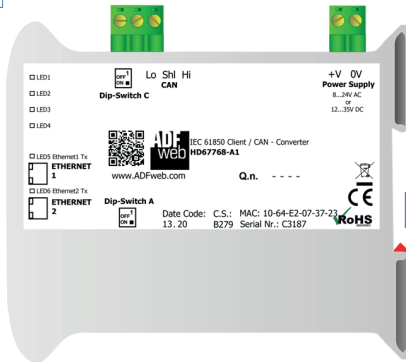

**Dip-Switch B:**  
-Dip1 – CAN Termination Resistor  
☐ = Open    ☐ = 120 Ohm

**Connector 2:**  
CAN port (Isolated port)  
Hi = High wire  
Sh1 = Shield\* (to Isolated Ground)  
Lo = Low wire

Rail DIN  
Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Device state

**Led3:**  
Green  
IEC 61850 comm.

**Led4:**  
Green  
CAN comm.

**Led5:**  
Green  
Ethernet1 Tx

**Connector 3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector 4:**  
Ethernet2 port  
(RJ45 Plug)

**Connector 1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67768-A1