

EXTERNAL LINKS

HD67777-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67777_ENG.pdf](http://www.adfweb.com/download/filefold/MN67777_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67777_ENG.pdf](http://www.adfweb.com/download/filefold/BS67777_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67777zip](http://www.adfweb.com/download/filefold/SW67777zip)

HD67777-A1

BOX SHEET

**IEC 61850 Client/ PROFIBUS Slave
Converter**

Box Sheet for Order code: HD67777-A1
Document code: BS67777-A1
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67777-A1

Dip-Switch A:
-Dip1 – Must be at ON
-Dip2 – Functioning Mode



Normal Spot



Led1:
Green
ON

Led2:
Green
Device State

Led3:
Green
IEC61850 comm.

Led4:
Green
PROFIBUS comm.

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 Port
(RJ45 Plug)


Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 Port
(RJ45 Plug)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Connector2:
PROFIBUS port (Isolated port)
(D-SUB9-Female)

 -PIN3 = wire A
-PIN5 = Shield** (to Isolated Ground)
-PIN8 = wire B



5 4 3 2 1
9 8 7 6

Order code: HD67777-A1