

## Modbus TCP Slave / KNX - Converter


To obtain the complete manual please go to:

[www.adfweb.com/download/filefold/MN67815\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67815_ENG.pdf)

To obtain the new version of this box sheet please go to:

[www.adfweb.com/download/filefold/BS67815-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67815-B2_ENG.pdf)

### CONNECTION SCHEME:

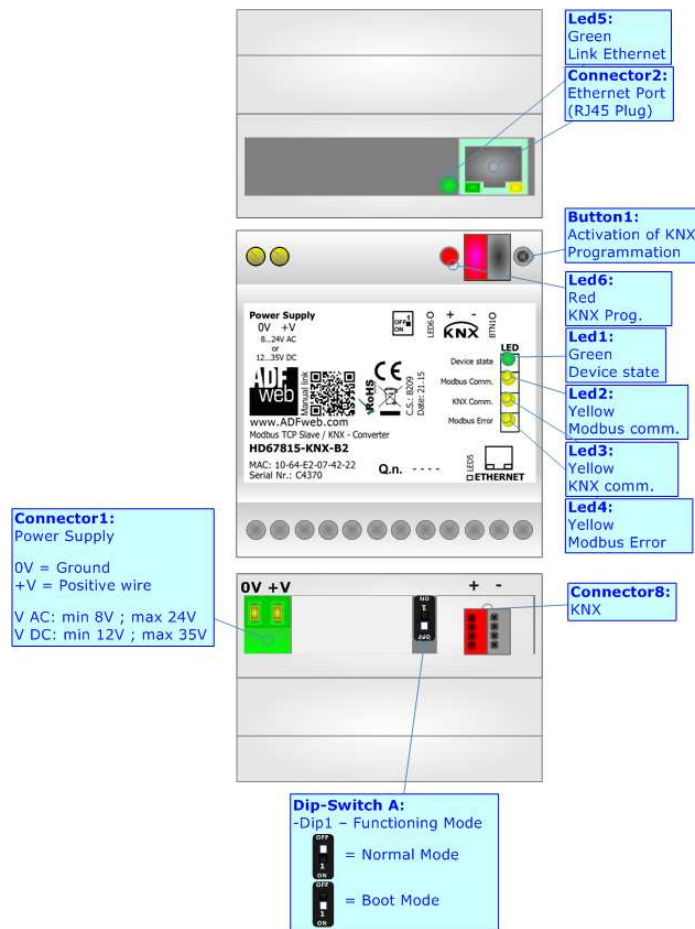

### CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67815. To obtain this software please go to:

[www.adfweb.com/download/filefold/SW67815.zip](http://www.adfweb.com/download/filefold/SW67815.zip)

ADFweb.com S.r.l.  
www.adfweb.com  
support@adfweb.com

Manual



Box-Sheet



Software

