

# BOX SHEET

DALI / BACnet/IP Master  
Converter

Box Sheet for Order code: HD67832-IP-B2  
Document code: BS67832-IP-B2  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67832\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67832_ENG.pdf)

QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67832-IP-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67832-IP-B2_ENG.pdf)

QR of Software

---

[www.adfweb.com/download/  
filefold/SW67832.zip](http://www.adfweb.com/download/filefold/SW67832.zip)

**HD67832-IP-B2**

# CONNECTION SCHEME

Order code: HD67832-IP-B2

## Dip-Switch A: -Dip1 – Functioning Mode

= Normal Mode

= Boot Mode




**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
DALI comm.

**Led3:**  
Yellow  
BACnet comm.

**Led4:**  
Yellow  
Error state

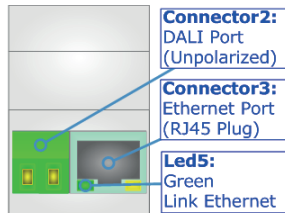

**Connector2:**  
DALI Port  
(Unpolarized)

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet



**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V