

EXTERNAL LINKS

HD67B32-MSTP-B2



QR of Manual

[www.adfweb.com/download/
filefold/MN67B32_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B32_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B32-MSTP-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B32-MSTP-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B32.zip](http://www.adfweb.com/download/filefold/SW67B32.zip)

BOX SHEET

**OPC UA Server / BACnet MSTP Slave
Converter**

Box Sheet for Order code: HD67B32-MSTP-B2
Document code: BS67B32-MSTP-B2
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD67B32-MSTP-B2

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B32-MSTP-B2


Dip-Switch B:

-Dip1 - Termination RS485 line



Dip-Switch A:

-Dip1 - Functioning Mode

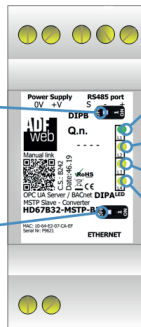

Led1:
Green
Device state

Led2:
Yellow
OPC UA comm.

Led3:
Yellow
BACnet comm.

Led4:
Yellow
Error state



Connector3:
Ethernet Port
(RJ45 Plug)

Led5:
Green
Link Ethernet



Connector4:
RS485 port
S = Shield (to Isolated Ground)
- = Negative wire
+ = Positive wire

Connector1:
Power Supply
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V