



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67B44\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B44_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67B44-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B44-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67B44.zip](http://www.adfweb.com/download/filefold/SW67B44.zip)

**HD67B44-B2**

# BOX SHEET

**OPC UA Server / NMEA 2000 - Converter**

Box Sheet for Order code: HD67B44-B2  
Document code: BS67B44-B2  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67B44-B2

## Dip-Switch B:

-Dip1 – Termination CAN line



= Open



= 120 ohm

## Dip-Switch A:

-Dip1 – Functioning Mode



= Normal Mode



= Boot Mode



## Led1:

Green  
Device state

## Led2:


Yellow  
OPC UA comm.

## Led3:

Yellow  
NMEA 2000 comm.

## Led4:


Yellow  
Error state

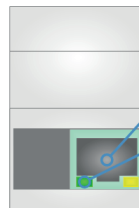

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

## Led5:

Green  
Link Ethernet

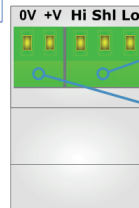

**Connector4:**  
RS485 port

S = Shield (to Isolated Ground)  
- = Negative wire  
+ = Positive wire

**Connector4:**  
CAN port

Hi = High wire  
Shl = Shield\* (to Isolated Ground)  
Lo = Low wire

Order code: HD67B44-B2