

EXTERNAL LINKS

HD67B71-232-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67B71_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B71_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B71-232-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B71-232-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B71.zip](http://www.adfweb.com/download/filefold/SW67B71.zip)

HD67B71-232-A1

BOX SHEET

PROFINET Master / Modbus Slave Converter

Box Sheet for Order code: HD67B71-232-A1
Document code: BS67B71-232-A1
V1.002



ADFweb.com srl



Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B71-232-A1

Dip-Switch A:
-Dip1 – Functioning Mode
☐ = Normal ☐ = Boot

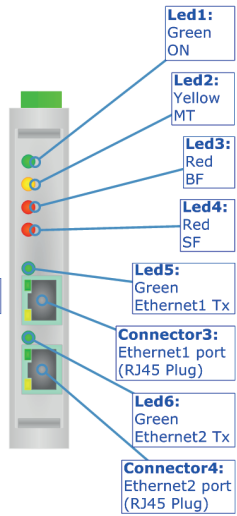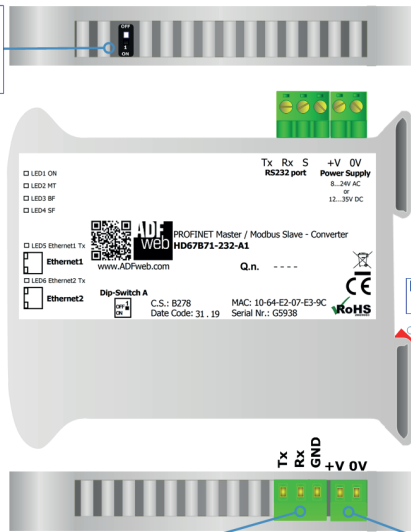

Connector2:
RS232 (Isolated port)
GND = Ground* (to Isolated Ground)
Rx = Rx line
Tx = Tx line

Rail DIN Clamp

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67B71-232-A1