



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67C61\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67C61_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67C61-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67C61-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67C61.zip](http://www.adfweb.com/download/filefold/SW67C61.zip)

**HD67C61-B2**

# BOX SHEET

EnOcean / DeviceNet Converter

Box Sheet for Order code: HD67C61-B2  
Document code: BS67C61-B2  
V1.000




**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67C61-B2

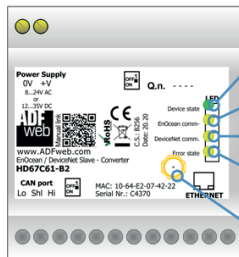


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
EnOcean comm.

**Led3:**  
Yellow  
DeviceNet comm.

**Led4:**  
Yellow  
Error state

**Connector5:**  
Antenna

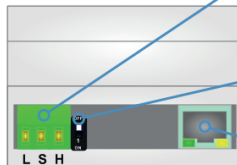

## Connector7:

CAN port

L = Low wire

S = Shield (to Isolated Ground)

H = High wire

## Dip-Switch c:


-Dip1 – Termination CAN line

Open

120 ohm

## Connector2:

Ethernet Port  
(RJ45 Plug)

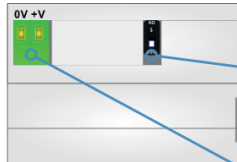

## Dip-Switch A:

-Dip1 – Functioning Mode

Normal Mode

Boot Mode

## Connector1:

Power Supply

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67C61-B2