



QR of Manual

[www.adfweb.com/download/
filefold/MN67E57_ENG.pdf](http://www.adfweb.com/download/filefold/MN67E57_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67E57-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67E57-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67E57.zip](http://www.adfweb.com/download/filefold/SW67E57.zip)

HD67E57-A1

BOX SHEET

EtherCAT Master / CAN - Converter

Box Sheet for Order code: HD67E57-A1
Document code: BS67E57-A1
V1.000



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67E57-A1

Dip-Switch A:
-Dip1 – Functioning Mode
= Normal = Boot

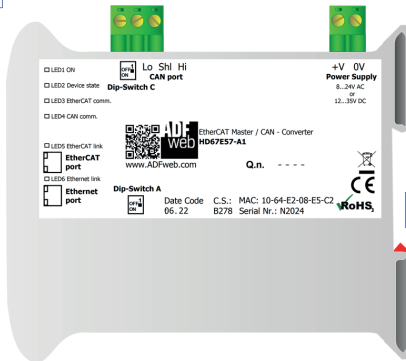

Rail DIN
Clamp

Led1:
Green
ON

Led2:
Green
Device state

Led3:
Green
EtherCAT comm.

Led4:
Green
CAN comm.

Led5:
Green
EtherCAT link

Connector5:
EtherCAT port
(RJ45 Plug)

Led6:
Green
Ethernet link

Connector6:
Ethernet port
(RJ45 Plug)

Dip-Switch C:
-Dip1 – CAN Termination Resistor
= Open = 120 Ohm

Connector4:
CAN port (Isolated port)
Hi = High wire
Shl = Shield* (to Isolated Ground)
Lo = Low wire

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67E57-A1