

EXTERNAL LINKS

HD67E77-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67E77_ENG.pdf](http://www.adfweb.com/download/filefold/MN67E77_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67E77-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67E77-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67E77.zip](http://www.adfweb.com/download/filefold/SW67E77.zip)

HD67E77-A1

BOX SHEET

**EtherCAT Master / Ethernet IP slave
Converter**

Box Sheet for Order code: HD67E77-A1
Document code: BS67E77-A1
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67E77-A1

Dip-Switch A:

-Dip1 - Functioning Mode



= Normal



= Boot



Led1:
Green
ON

Led2:
Green
Device state

Led3:
Green
EtherNet/IP comm.

Led4:
Green
EtherCAT comm.

Led5:
Green
EtherCAT link

Rail DIN
Clamp

Connector5:
EtherCAT port
(RJ45 Plug)

Led6:
Green
Ethernet link

Connector6:
Ethernet port
(RJ45 Plug)

Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67E77-A1