

## EXTERNAL LINKS

HD67F23-B2-868MHz



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67F23\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67F23_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67F23-B2-868MHz\\_  
ENG.pdf](http://www.adfweb.com/download/filefold/BS67F23-B2-868MHz_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67F23.zip](http://www.adfweb.com/download/filefold/SW67F23.zip)

HD67F23-B2-868MHz

# BOX SHEET

LoRaWan Gateway / DMX Converter  
Converter

Box Sheet for Order code: HD67F23-B2-868MHz  
Document code: BS67F23-B2-868MHz  
V1.000



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67F23-B2-868MHz


**Dip-Switch B:**  
-Dip1 – Termination RS485 line



1 On = Open  
0 Off = 120 ohm

**Connector5:**  
Antenna

**Dip-Switch A:**  
-Dip1 – Functioning Mode



1 On = Normal Mode  
0 Off = Boot Mode




**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
LoRaWAN comm.


**Led3:**  
Yellow  
DMX comm.

**Led4:**  
Yellow  
Error State

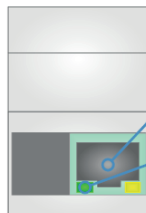

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet

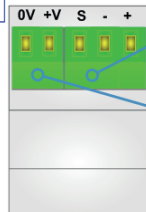

**Connector4:**  
RS485 port

S = Shield (to Isolated Ground)  
- = Negative wire  
+ = Positive wire

**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67F23-B2-868MHz