

## BACnet IP slave / M-Bus master - Converter

To obtain the complete manual please go to:

www.adfweb.com/download/filefold/MN67694\_ENG.pdf

To obtain the new version of this box sheet please go to: www.adfweb.com/download/filefold/BS67694-IP-B2\_ENG.pdf

## **CONNECTION SCHEME:**

		Connector2: Ethernet Port (RJ45 Plug)
	Power Supply M-Bus OV +V 15.21% AC O.n. 15.23% AC O	Led1: Green Device state Led2: Yellow Not used Led3: Yellow M-Bus comm.
Connector1: Power Supply 0V = Ground +V = Positive wire V AC: min 15V ; max 21V	00 + V	Led4: Yellow BACnet comm.
V DC: min 18V ; max 35V Connector3: Unpolarized M-Bus master		Dip-Switch A: -Dip1 - Functioning Mode = Normal Mode = Boot Mode

## **CONFIGURATION SOFTWARE:**

For setting up the device you need the software named SW67694. To obtain this software please go to:

www.adfweb.com/download/filefold/SW67694.zip

ADFweb.com s.r.l. www.adfweb.com support@adfweb.com

Manual

Box-Sheet



Software

info@adfweb.com