![ADFweb logo] Electronic Devices
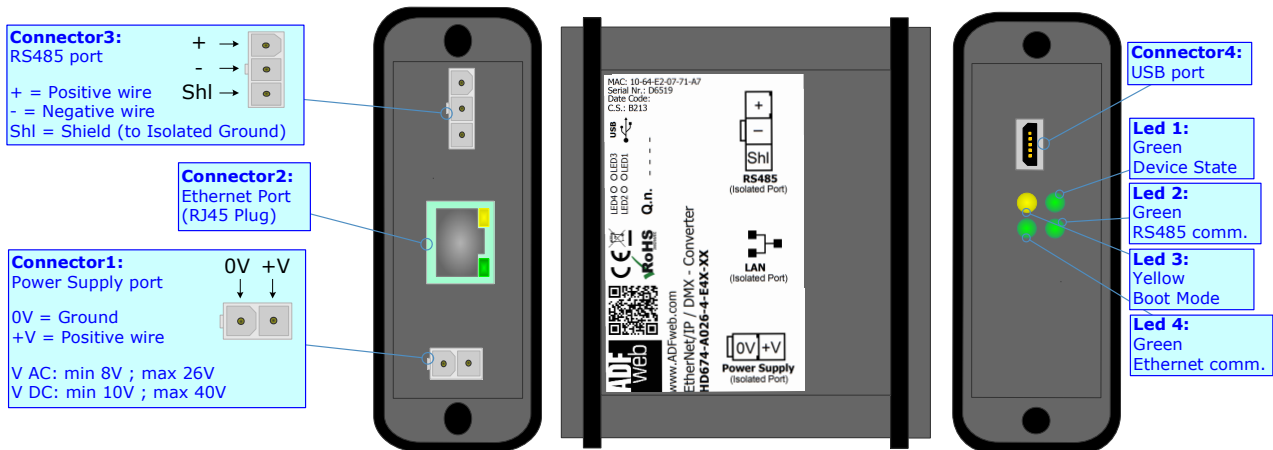
DMX / EtherNet/IP - Converter

To obtain the complete manual please go to

www.adfweb.com/download/filefold/MN674-A026_ENG.pdf

To obtain the new version of this box sheet please go to

www.adfweb.com/download/filefold/BS674-A026-E4x_ENG.pdf

CONNECTION SCHEME:

Connector3:
RS485 port
+ = Positive wire
- = Negative wire
Shl = Shield (to Isolated Ground)

Connector2:
Ethernet Port
(RJ45 Plug)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 26V
V DC: min 10V ; max 40V

Connector4:
USB port

Led 1:
Green
Device State

Led 2:
Green
RS485 comm.

Led 3:
Yellow
Boot Mode

Led 4:
Green
Ethernet comm.

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW674-A026.
To obtain this software please go to

www.adfweb.com/download/filefold/SW674-A026.zip

ADFweb.com   s.r.l.
www.adfweb.com
info@adfweb.com
support@adfweb.com

Manual	Box-Sheet	Software