![ADFweb logo] Electronic Devices
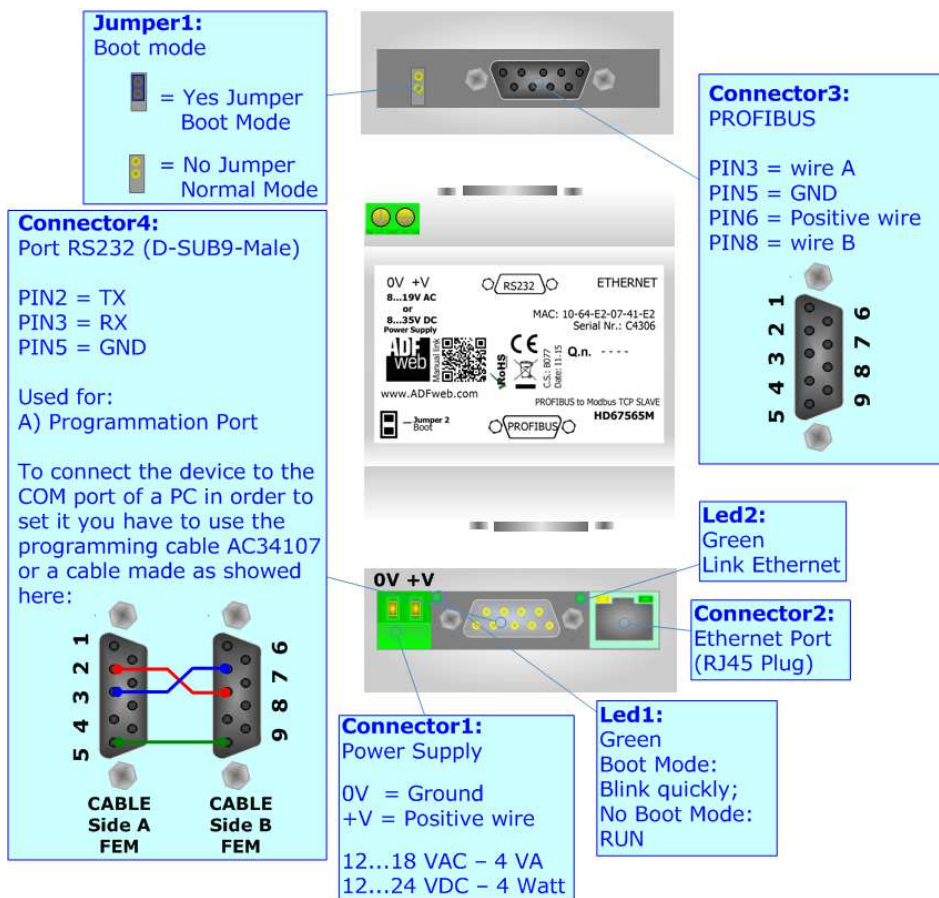
PROFIBUS Slave / Modbus TCP Slave - Converter

To obtain the complete manual please go to

www.adfweb.com/download/filefold/MN67565_ENG.pdf

To obtain the new version of this box sheet please go to

www.adfweb.com/download/filefold/BS67565M_ENG.pdf

CONNECTION SCHEME:

Jumper1:
Boot mode

= Yes Jumper Boot Mode

= No Jumper Normal Mode

Connector4:
Port RS232 (D-SUB9-Male)

PIN2 = TX
PIN3 = RX
PIN5 = GND

Used for:
A) Programming Port

To connect the device to the COM port of a PC in order to set it you have to use the programming cable AC34107 or a cable made as showed here:

CABLE Side A FEM   CABLE Side B FEM

Connector3:
PROFIBUS

PIN3 = wire A
PIN5 = GND
PIN6 = Positive wire
PIN8 = wire B

Led2:
Green
Link Ethernet

Connector2:
Ethernet Port
(RJ45 Plug)

Led1:
Green
Boot Mode:
Blink quickly;
No Boot Mode:
RUN

Connector1:
Power Supply

0V = Ground
+V = Positive wire

12...18 VAC – 4 VA
12...24 VDC – 4 Watt

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67565.
To obtain this software please go to

www.adfweb.com/download/filefold/SW67565.zip

Manual	Box-Sheet	Software