

## EXTERNAL LINKS

HD67510-Slim-485

# BOX SHEET

**Modbus TCP Master / Modbus Slave  
Slim Converter**

QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67510\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67510_ENG.pdf)

QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67510-Slim-485\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67510-Slim-485_ENG.pdf)

QR of Software

---

[www.adfweb.com/download/  
filefold/SW67510.zip](http://www.adfweb.com/download/filefold/SW67510.zip)

Box Sheet for Order code: HD67510-Slim-485  
Document code: BS67510-Slim-485  
V1.000



**ADFweb.com srl**



Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy



**HD67510-Slim-485**


[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67510-Slim-485

**Dip-Switch B:**  
-Dip1 – Termination RS485 line  
 = Open     = 120 ohm

**Dip-Switch A:**  
-Dip1 – Functioning Mode  
 = Normal Mode  
 = Boot Mode

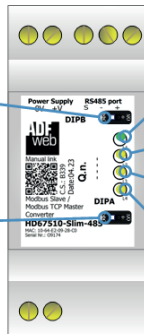


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
Modbus comm.

**Led3:**  
Yellow  
Modbus TCP comm.


**Led4:**  
Yellow  
Not used

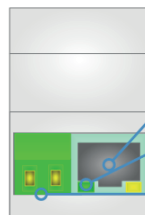

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet

**Connector2:**  
DALI Port  
(Unpolarized)

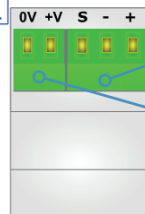

**Connector4:**  
RS485 port  
S = Shield (to Isolated Ground)  
- = Negative wire  
+ = Positive wire

**Connector1:**  
Power Supply  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V